

## Honeywell Vista 10SE

### Wiring Uplink's 5530M Cellular Communicators and Programming the Panel


**CAUTION:**

- It is advised that an experienced alarm installer programs the panel as further programming may be required to ensure proper performance and use of the full functionality.
- Do not route any wiring over circuit board.
- Full panel testing, and signal confirmation, must be completed by the installer.

**NEW FEATURE:** For 5530M Communicators, the status of the panel can be retrieved not only from the status PGM but now also from the Open/Close reports from the dialler.

**IMPORTANT NOTE:** The Open/Close reporting needs to be enabled during the initial pairing procedure

### Wiring the 5530M communicators to Honeywell Vista 10S

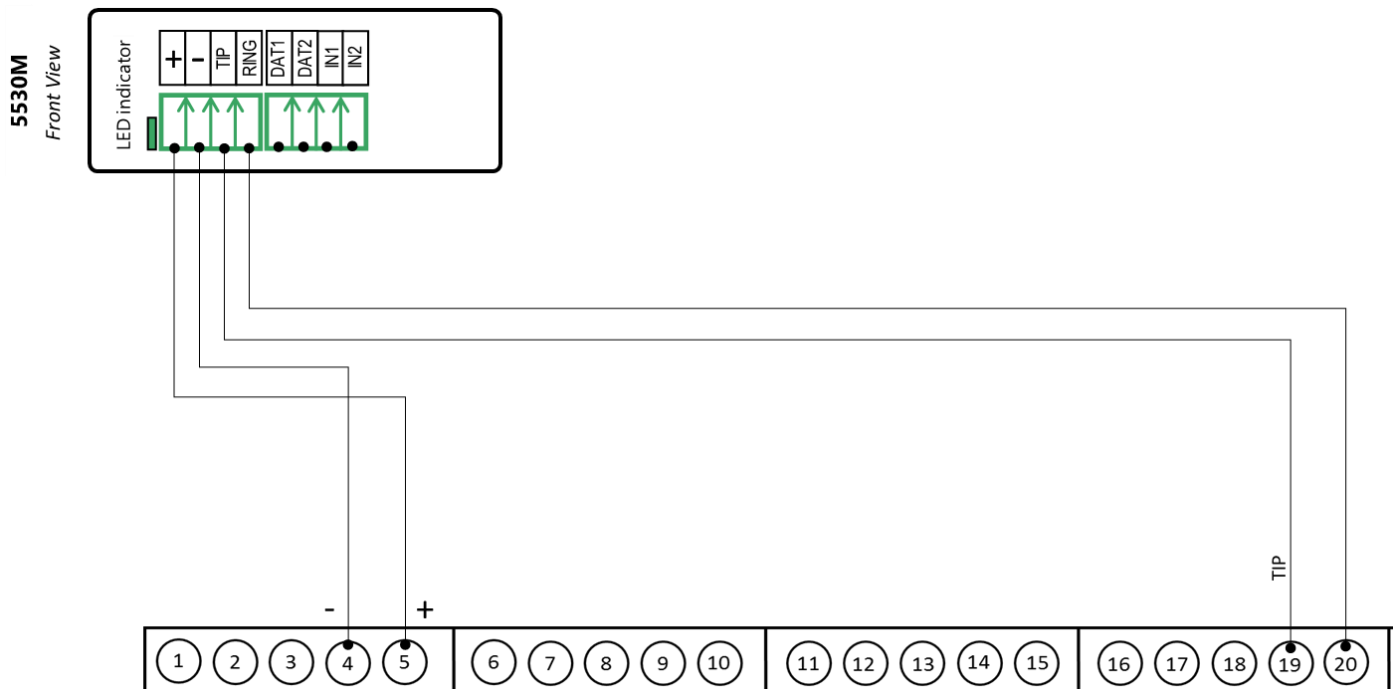

## Programming the Honeywell Vista 10SE Alarm Panel via the Keypad

Enable Contact ID reporting:

Keypad Display	Keypad Entry	Action Description
Ready to Arm	4111 800	Enter installer code 4111, followed by 800 to enter Programming mode.
Installer code 20	*41	To go to Primary phone number menu.
Prim. Phone	123456*	Enter actual or imaginary phone to report to (123456 is an example), * to set.
Field?	43	To go to subscriber account number.
Sub ID	1234	Set the account number you will receive events from (1234 is an example).
Phone Sys 45	1	Press 1 to select tone dialing.
Rep format 46	7	Press 7 to select Ademco Contact ID reporting.
Split/Dual 47	0	Press 0 to disable Split/Dual reporting.
15 Sec Dial Dly 48	*65	To go to Open/Exit Alarm reporting code.
Open/Exit Rpt 65	11	Enter a number different from 0 to enable.
Away/Stay Rpt 66	11	Enter a number different from 0 to enable.
RF LB Rpt 67	*70	To go to Alarm Restore/Open code.
Alm. Res. Rpt 70	1	Enter 1 to enable.
Trb Res Rpt 71	*99	To exit programming mode.