

## Interlogix Concord Express

Wiring Uplink's Cellular Communicators  
and Programming the Panel


### CAUTION:

- It is advised that an experienced alarm installer programs the panel as further programming may be required to ensure proper performance and use of the full functionality.
- Do not route any wiring over circuit board.
- Full panel testing, and signal confirmation, must be completed by the installer.

**NEW FEATURE:** For Uplink Series Communicators, the status of the panel can be retrieved not only from the status PGM but now also from the Open/Close reports from the dialer. Therefore, wiring the white wire and programming of the status PGM of the panel is optional.

**IMPORTANT NOTE:** The Open/Close reporting needs to be enabled during the initial pairing procedure.

### Wiring the Uplink 5530M communicators to Interlogix Concord Express

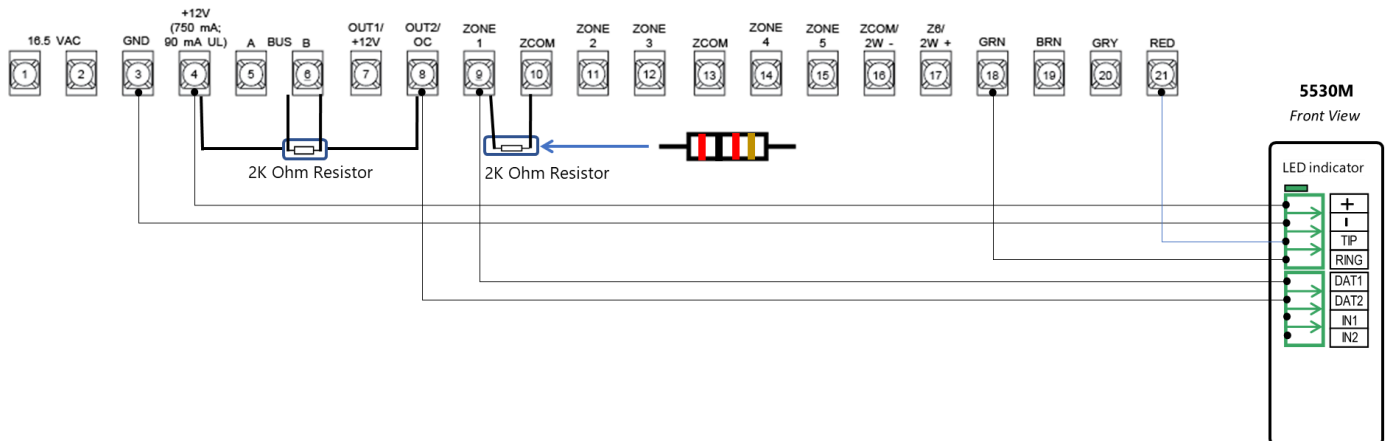

## Programming the Interlogix Concord Express Alarm Panel via the Keypad

Enable Contact ID reporting:

Keypad Display	Keypad Entry	Action Description
Date & Time	8 4321 00	To enter programming mode.
System programming	#B##	To go to phone number menu.
Phone number	123456#	Enter real or imaginary phone number, # to save.
	**	To go back to phone menu.
Phones	BBBB#	To go to Reporting, # to enter.
Reporting	B#	To go to partition 1 Opening Reports.
Opening reports	2#	Press 2 to turn it ON, # to save.
Opening reports	B#	To go to Closing reports.
Closing reports	2#	Press 2 to turn ON, # to save.
Closing reports	** ,BBBBB	To go to the Security menu.
	## B #	To go to Partition 1 account number.
Account number	1234#	Enter your 4-digit account number, # to save.
Account number	**B#	To go to CS phone 1.
CS Phone 1	#BBB#	To go to Open/Close reports.
Open/Close RPTS	2#	Press 2 to turn ON the option "Send Open/Close reports" to phone 1, # save.
Open/Close RPTS	BB#	To go to reporting format.
Reporting format	2#	To choose Contact ID, # to save.
Reporting format	**B#	To go to Global menu.
Global	#BBB#	To go to Comm. Failure, # to enter.
Comm. failure	B	To go to DTMF Dialing.
DTMF Dialing	2#	2 to turn it ON, # to save.
	*	Press * until shows System Programming.
System Programming	A#	The panel exits program mode.

Program Keyswitch zone and output:

Keypad Display	Keypad Entry	Action Description
Date & Time	8 4321 00	To enter programming mode.
System programming	#AAA#	To go to Learn Sensors.
Learn Sensors	#28#	Choose sensors group 28, # to go to next menu.
Trip sensor 1		For this step to be performed all the resistors shown in this manual must be in place. Use wire to short Zone 1 and ZCom. Wait for the panel to beep.
Trip Sensor 2	***BBB#	To go to Security.

Global	B#AA#	To go to Partition 1, Keyswitch Sensor.
Keyswitch Sensor	1#	Enter keyswitch sensor number.
	**A#	To go to Onboard Options.
Inputs	B#B#	To enter Configuration Output 2.
Configuration	00903#	009 To activate OUT2 when arming to stay/away, 03 for Sustained Level for OUT2.
	*	Press * until shows System Programming.
System Programming	A#	The panel exits program mode.