

Paradox Digiplex EVO 192

Wiring Uplink's Cellular Communicators and Programming the Panel


CAUTION:

- It is advised that an experienced alarm installer programs the panel as further programming may be required to ensure proper performance and use of the full functionality.
- Do not route any wiring over circuit board.
- Full panel testing, and signal confirmation, must be completed by the installer.

NEW FEATURE: For Uplink Series Communicators, the status of the panel can be retrieved not only from the status PGM but now also from the Open/Close reports from the dialler. Therefore, wiring the white wire and programming of the status PGM of the panel is optional.

IMPORTANT NOTE: The Open/Close reporting needs to be enabled during the initial pairing procedure.

Wiring the 5530M communicator to Paradox Digiplex EVO 192

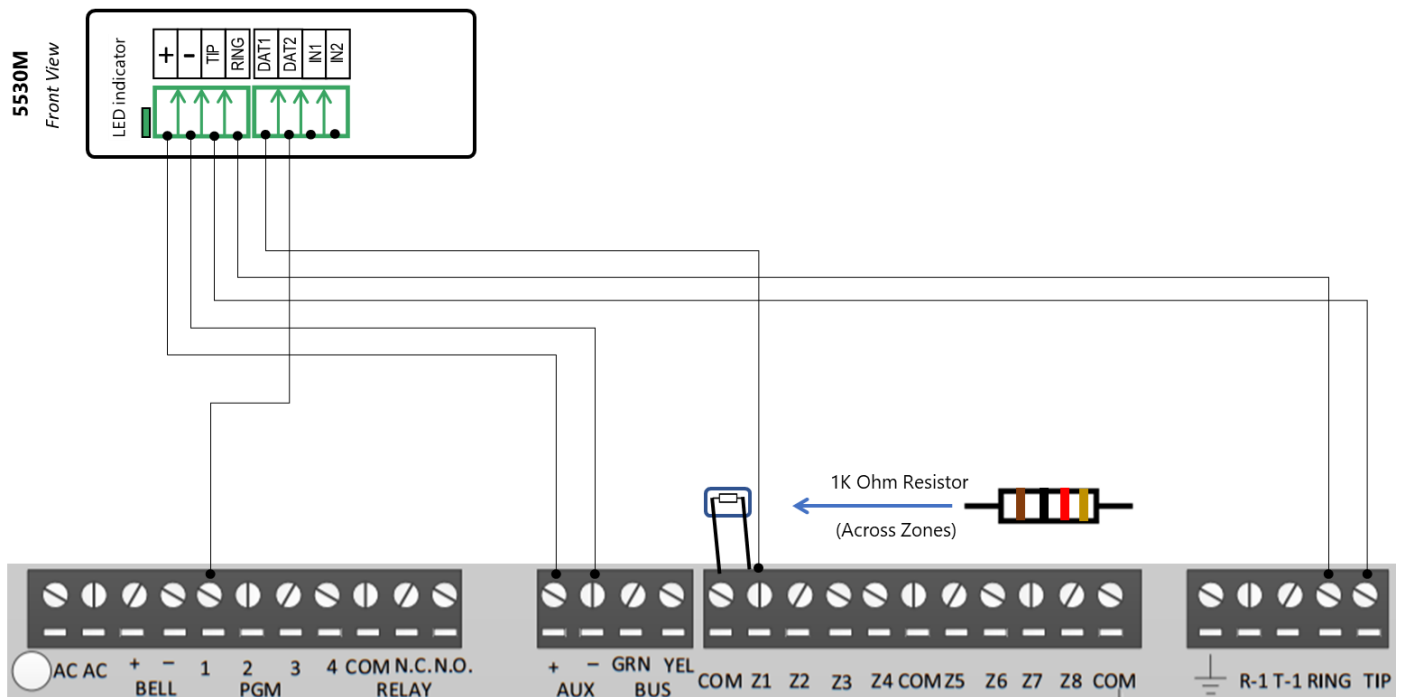

Programming the Paradox Digiplex EVO 192 Alarm Panel via the Keypad

Enable Contact ID reporting:

| Display | Keypad Entry | Action Description |
|-------------------|----------------------|------------------------------------------------------------------------|
| Date & Time | 0, 000000 | Hold 0 to go to Installer code, 000000 to go to Programming menu. |
| Section | 3035 | To go to System Options menu. |
| 3035 Options | 6 off, Enter | 6 must be OFF (account number transition for partition number), Enter. |
| 3036 | 1 off, 2 off, | 1 and 2 must be OFF – disable phone line monitoring. |
| | 3 on, 4 on, Enter | 3 and 4 must be ON – (3 is dialer Enabled, 4 Dialer method – tone). |
| 3037 | Clear | To go to main menu. |
| Section | 3061 | To go to account number for Partition 1. |
| 3061 Communicator | 1234 | Enter desired account number. |
| 3062 | Clear | To go to main menu. |
| Section | 3070 | To go to reporting formats. |
| 3070 Communicator | 5555 | To select Ademco ContactID for all lines. |
| 3071 Telephone | 123456, Enter | Enter actual or imaginary phone number to report to, Enter to save. |
| 3072 Telephone | Clear | To go to main menu. |
| Section | 4031 | To reset all reporting codes to FF (Default). |
| Section | Clear | Press Clear to exit programming mode. |

Enable keyswitch arm/disarm and status output:

| Display | Keypad Entry | Action Description |
|-------------------|----------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------|
| Date & Time | 0, 000000 | Hold 0 to go to Installer code, 000000 to go to Programming menu. |
| Section | 0001 | To go to Zone 1 programming |
| Serial/Input | Clear, Enter | Press Clear to remove the 8 digit serial number and the input (only 0s should be visible), then Enter to save and go back to the main menu. |
| Section | 0101 | To go to zone parameters. |
| 0101 Parameters | 01, Enter | 0 - Disable zone type for Zone 1; 1 - Assign Zone 1 to Partition 1. |
| 0102 Parameters | Clear, Clear | To go to main menu. |
| Section | 0501 | To go to keyswitch numbering. |
| 0501 Serial/Input | 8 digit No. 001 | Type again the 8 digit serial number of the panel, 001 to select input 1. |
| 0502 Serial/Input | Clear, Clear | To go to main menu. |
| Section | 0601 | To go to keyswitch parameters. |
| 0601 Parameters | 11, Enter, Clear | 1 to assign keyswitch zone to partition 1, 1 to choose Momentary Keyswitch, Enter to save, Clear to go back to main menu. |
| Section | 3033 | To go to System Options 3. |
| 3033 Options | 7 on, 8 Off, Enter, Clear, Clear | 7 must be ON (EOL resistor on hardwired zones), 8 must be OFF (disable ATZ zone doubling), Enter to save, Clear, Clear to go back to main menu. |

| | | |
|--------------|--------------|------------------------------------------|
| Section | 0910 | To go to PGM Activation programming. |
| 0910 Timers | 064 | To select event group "Status 1". |
| 0911 Timers | 255 | To select "Armed" for all zones. |
| 0912 Timers | 000 | To disable PGM activation start timer. |
| 0913 Timers | 000 | To disable PGM activation end timer. |
| 0914 Timers | 014 | To disarm with user code. |
| 0915 Timers | 000 | To select Feature Group. |
| 0916 Timers | 000 | To disable PGM deactivation start timer. |
| 0917 Timers | 000 | To disable PGM deactivation end timer. |
| 0918 Timers | 000 | To disable PGM 1 delay |
| 0919 Options | Clear, Clear | To go out of the programming menu. |